


Repair sheet



Cleaning the air filter (2012666)

HAMA recommends cleaning the air filter at least once a month when the compressor is used intensively. This is beneficial both in terms of the delivery rate and service life of the compressor. When the air filter is very dirty or damaged, it must be replaced.

Step 1

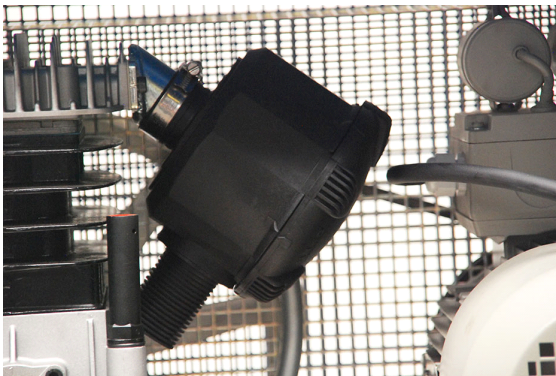


Unscrew the cover of the air filter housing.

Step 2




Remove the air filter (2012666) from the air filter housing.

Step 3

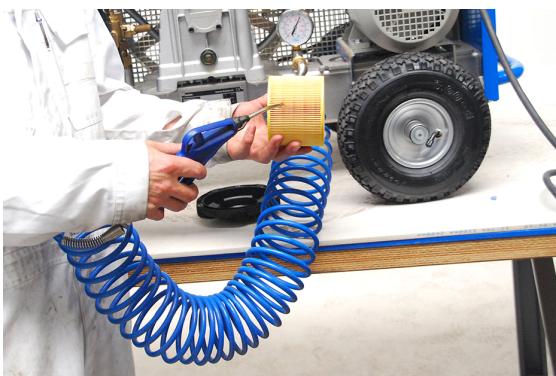


Connect an air gun to the air hose or directly to the compressor and blow the air filter clean.

Step 4

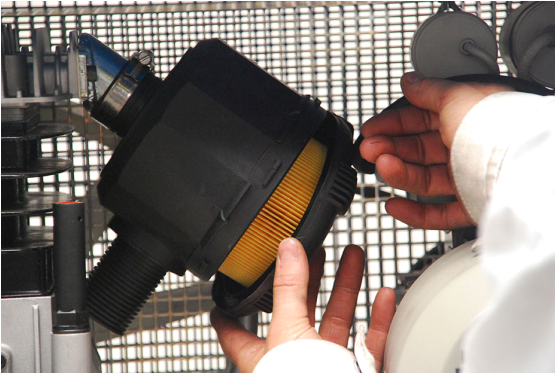

Fit the air filter (2012666) back in place and screw the cover back onto the air filter housing.

Step 5

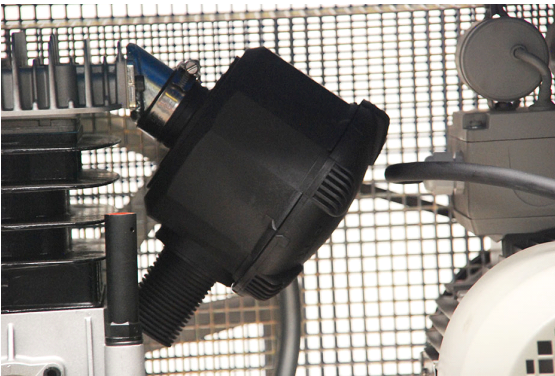

The compressor is now ready for use again.